


**Down (Vertical) Waste Outlet  
Drain Installation Using ShowerLine Pan  
with Sheet Waterproofing**

**SHOWERLINE** drain

by QUICKDRAIN USA

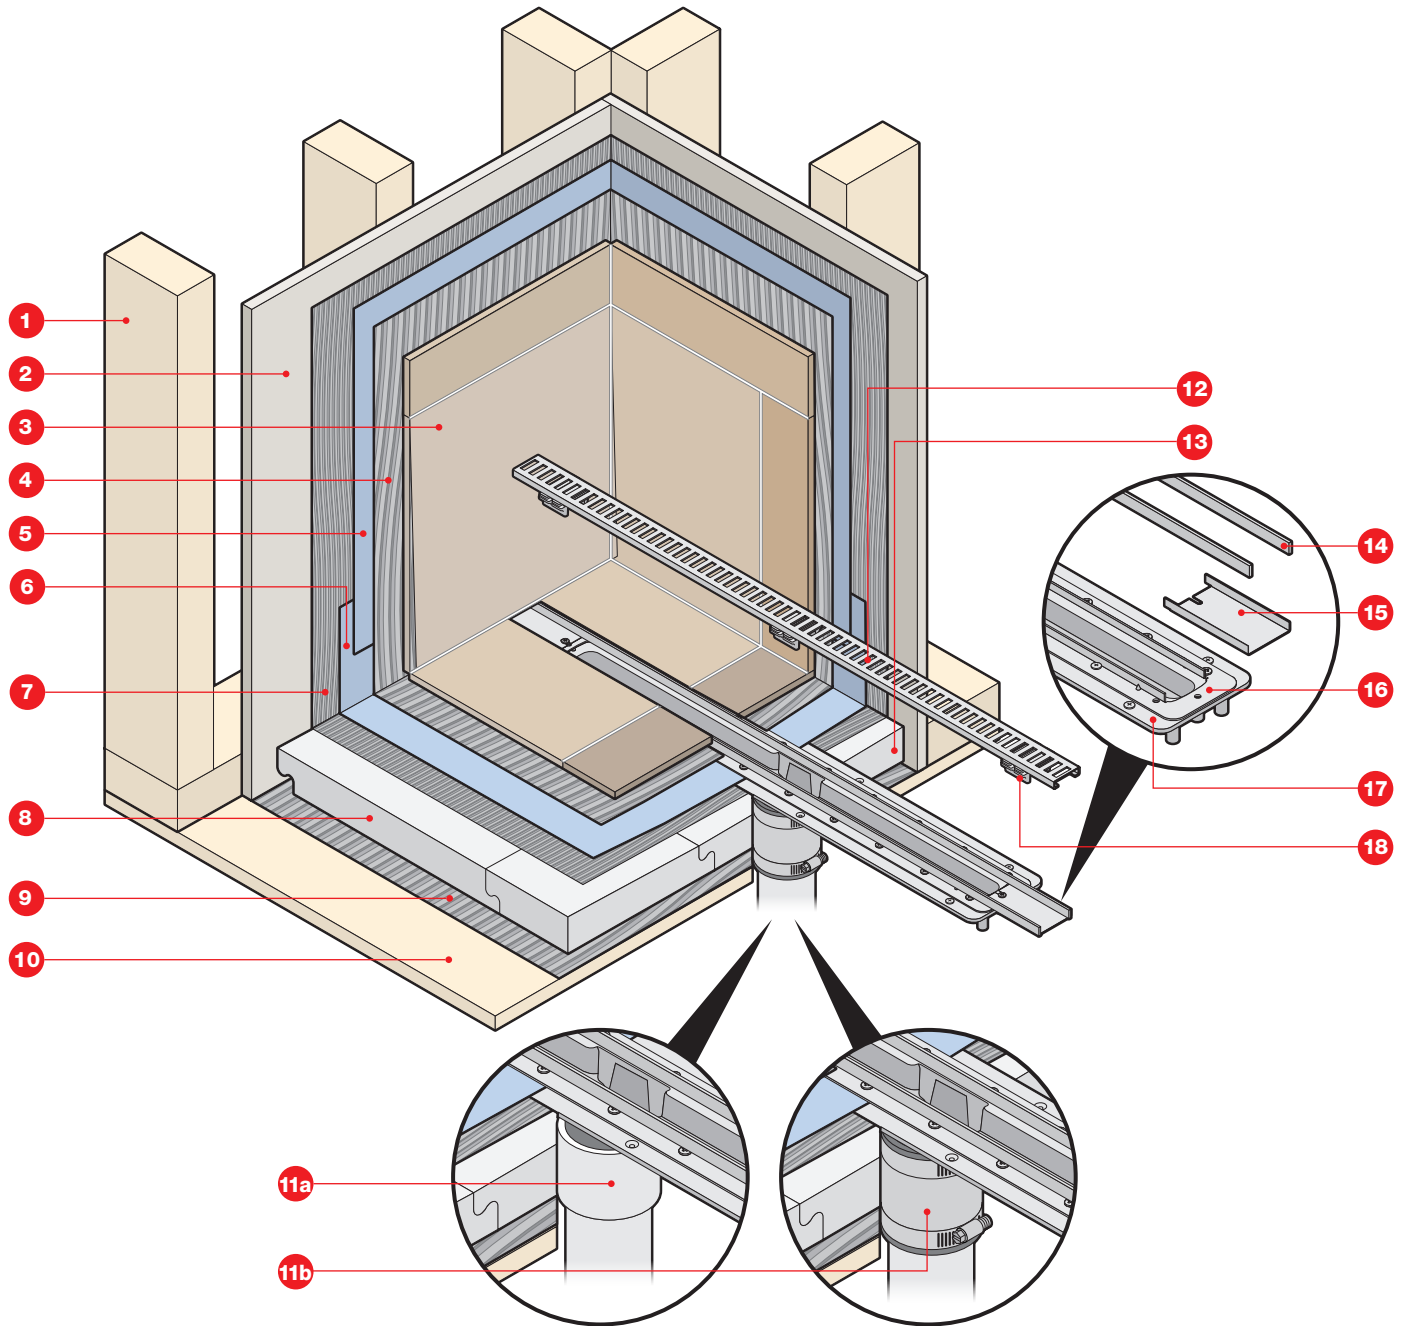

- 1** Stud Wall
- 2** Backer Board
- 3** Wall tile and Grout
- 4** Thin-set (for wall tile)
- 5** Sheet Wall Waterproofing
- 6** Sheet Shower Pan Waterproofing
- 7** Thin-set
- 8** Pre-sloped Interlocking PET Foam Panels
- 9** Thin-set
- 10** Sub-floor
- 11a** PVC to PVC connection
- 11b** Shielded No-Hub Coupling

- 12** Drain Cover
- 13** Pre-sloped Interlocking Drain Support Frame
- 14** Cover Chanel
- 15** Trough Extension
- 16** Clamping Collar
- 17** Drain Body
- 18** Height Adjustable Spacer